



146SL Disassembly For Access To L/R Gear

You may need to rotate the base to allow the screw access hole to line up.

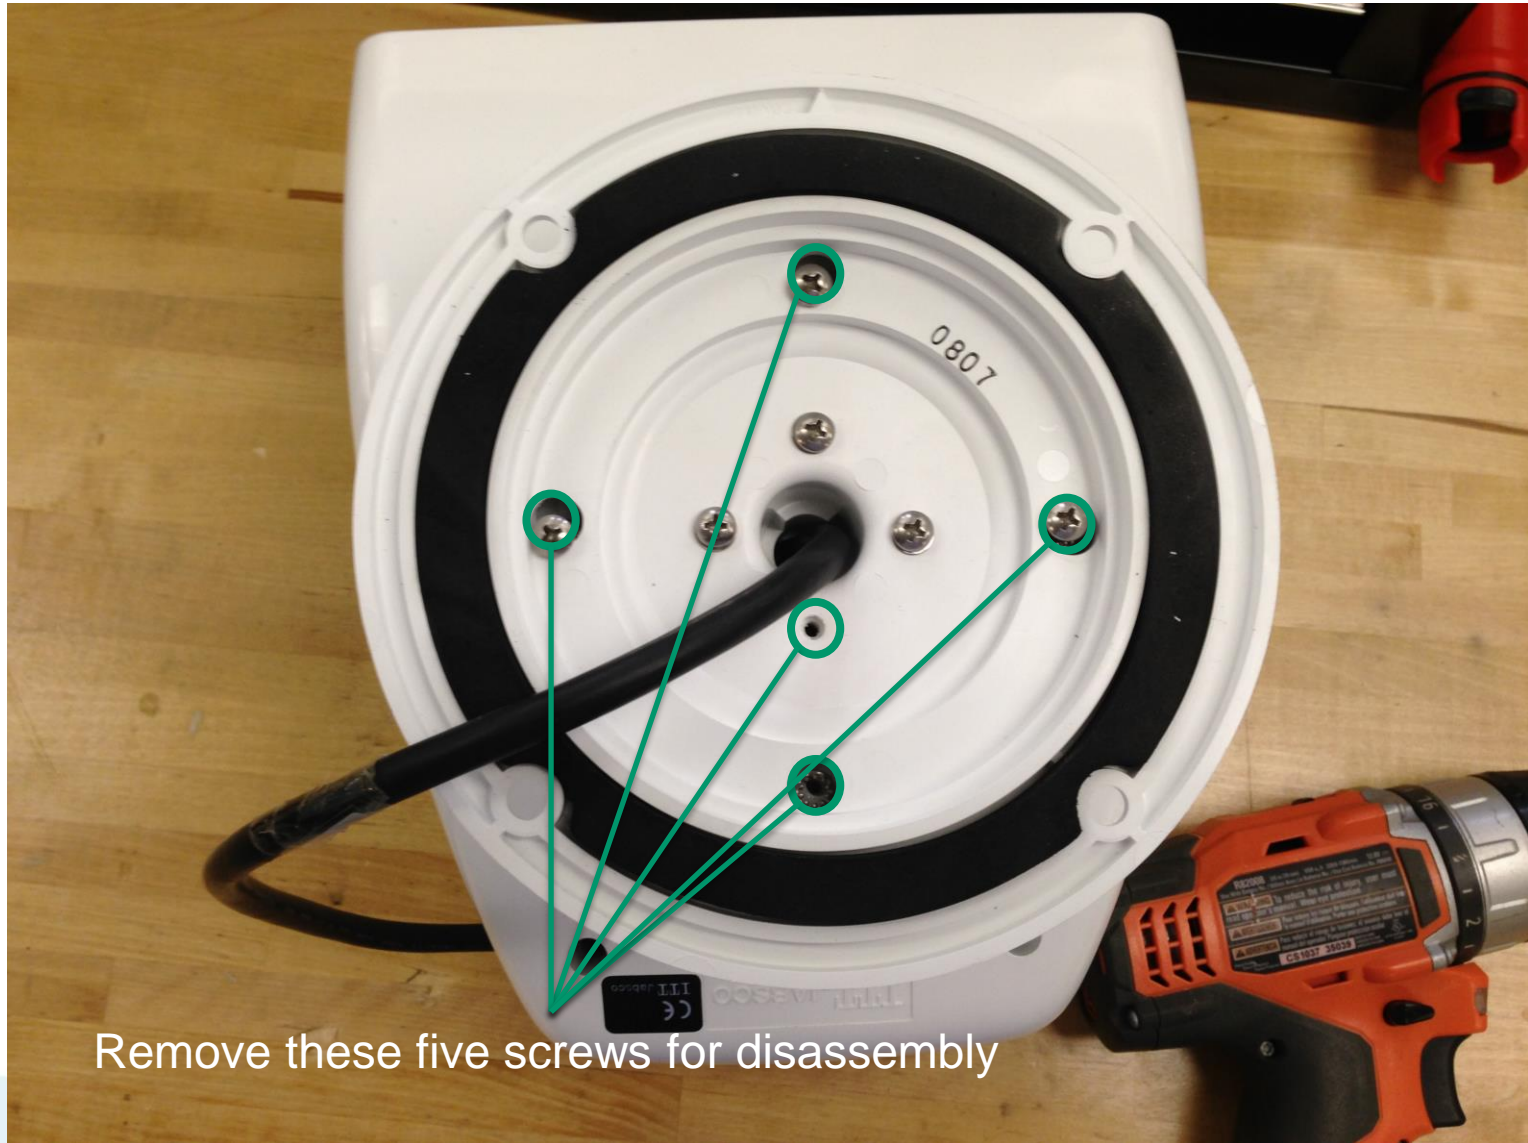


Remove these five screws for disassembly

Side View

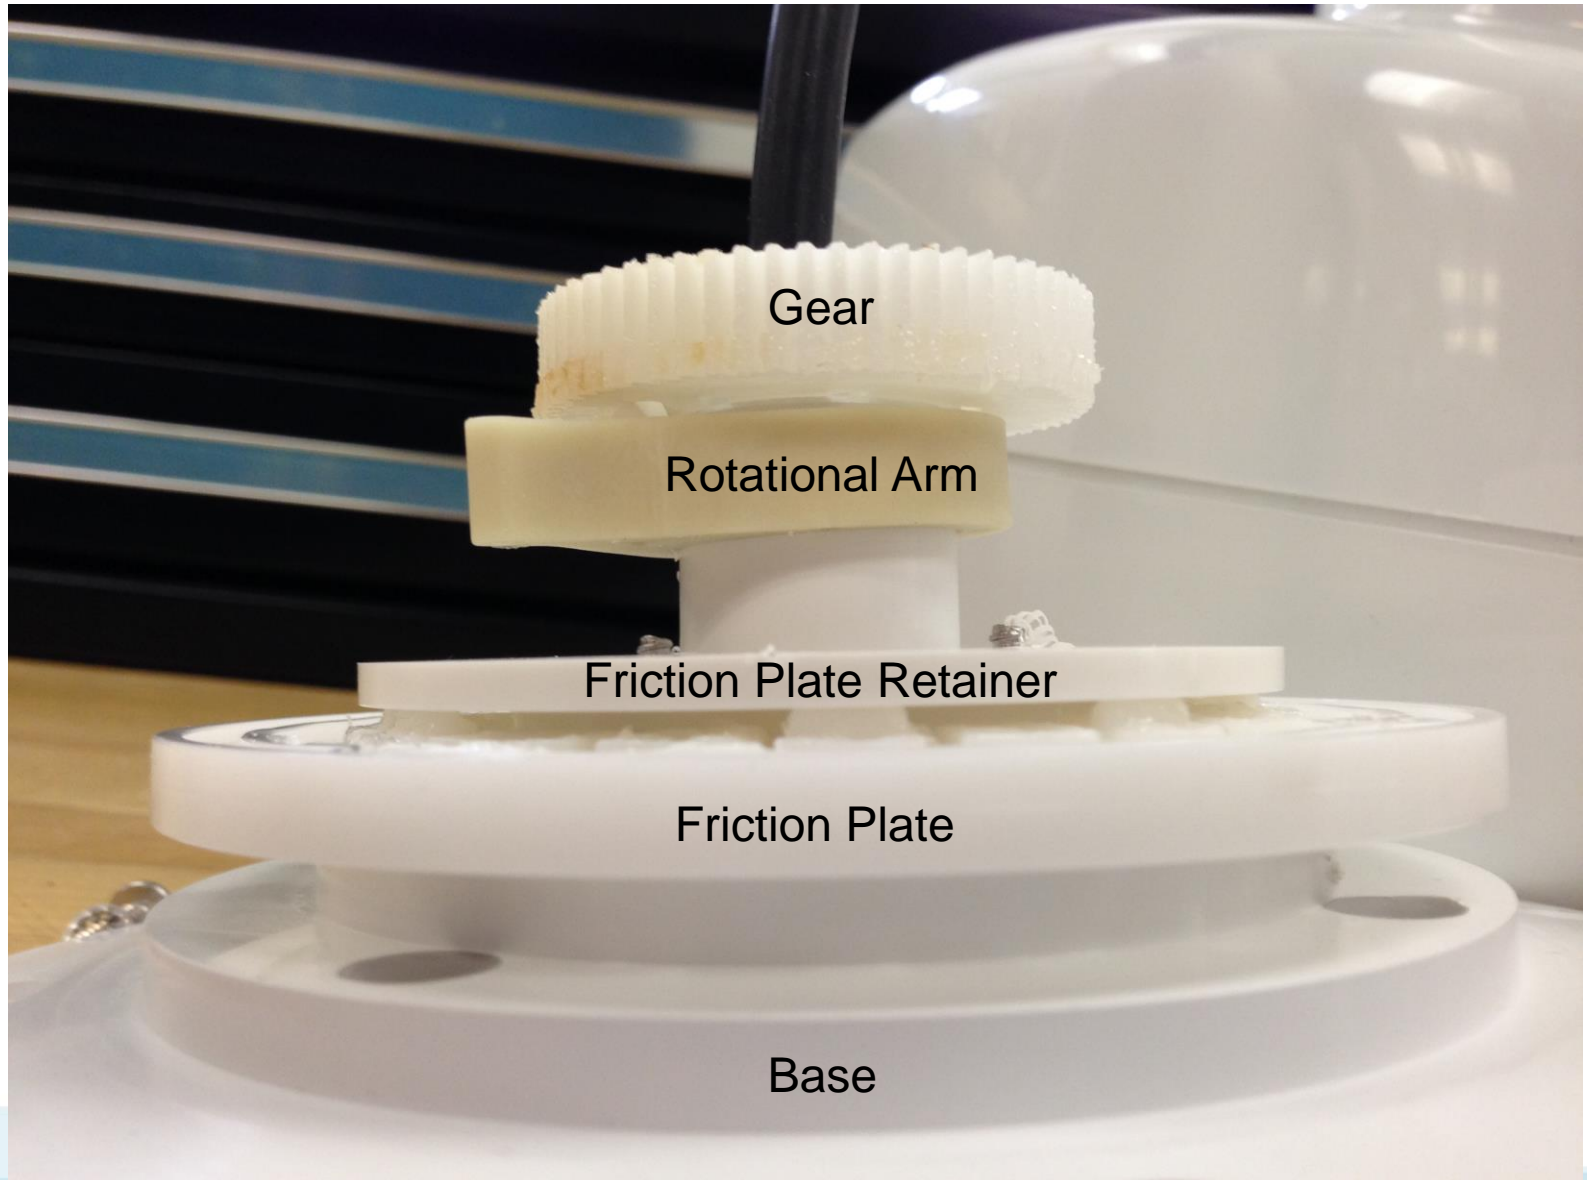


Top/Side View

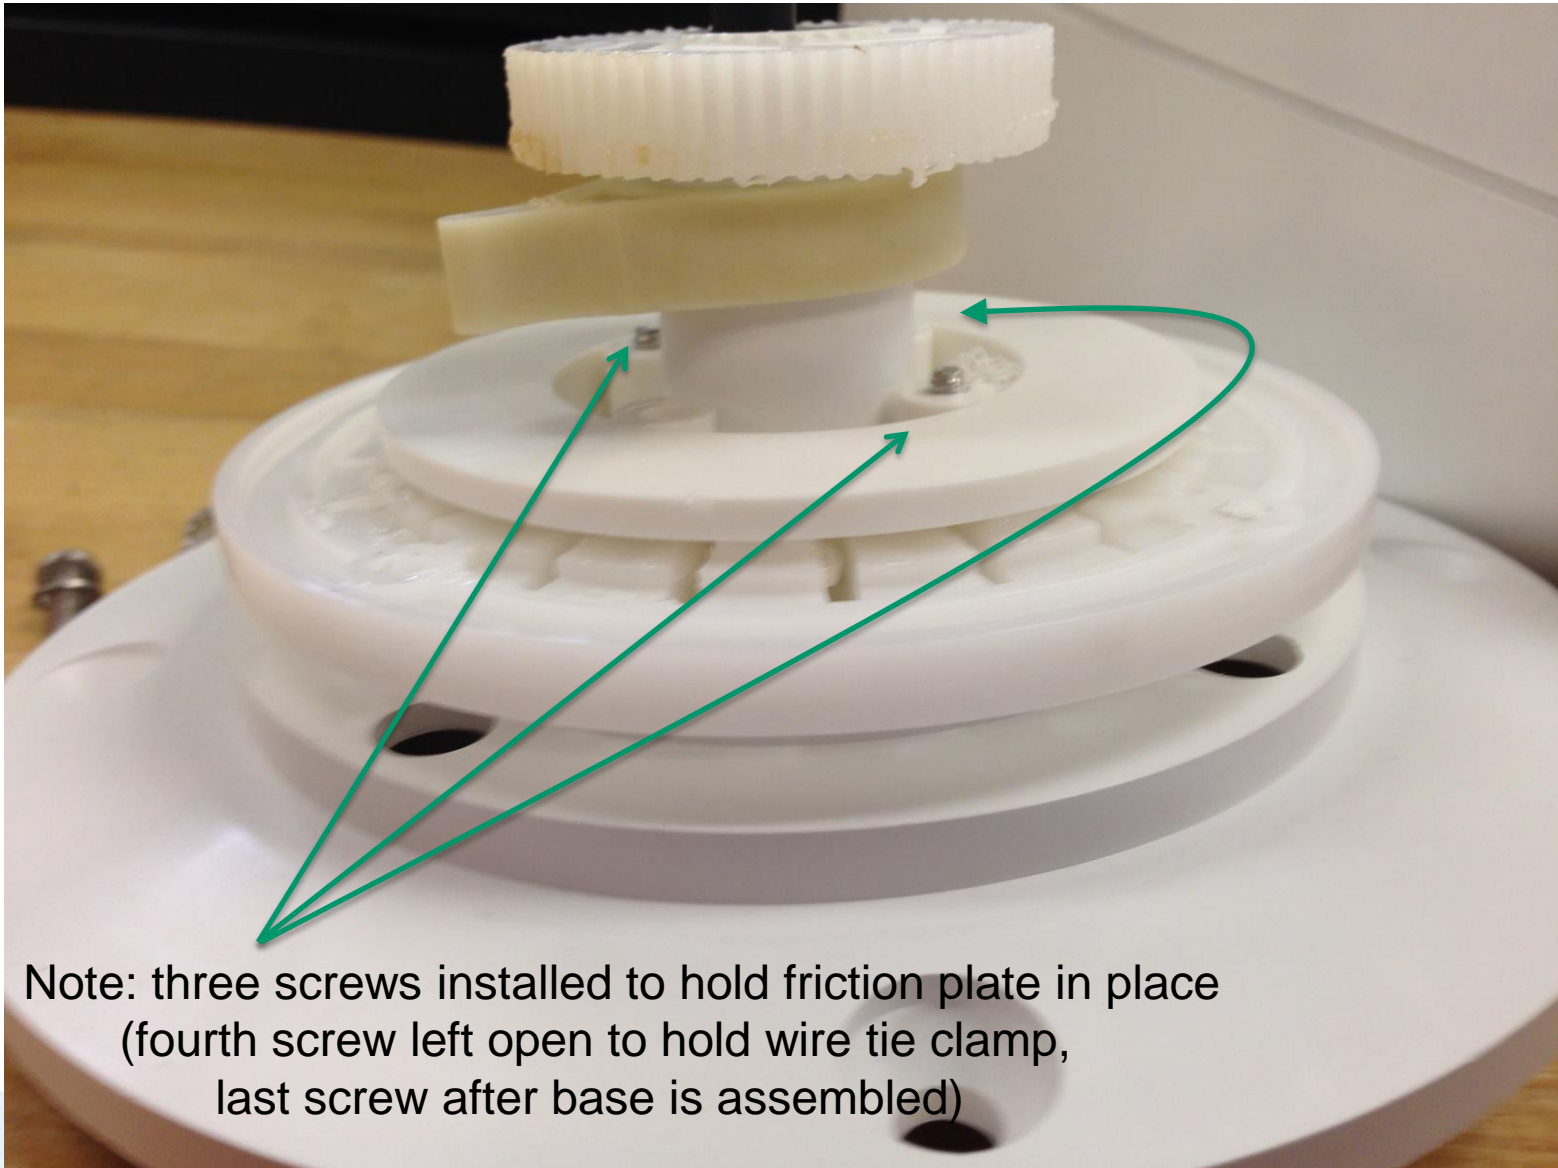

Note: three screws installed to hold friction plate in place
(fourth screw left open to hold wire tie clamp,
last screw after base is assembled)

Bottom View

Install these three screws before reassembly

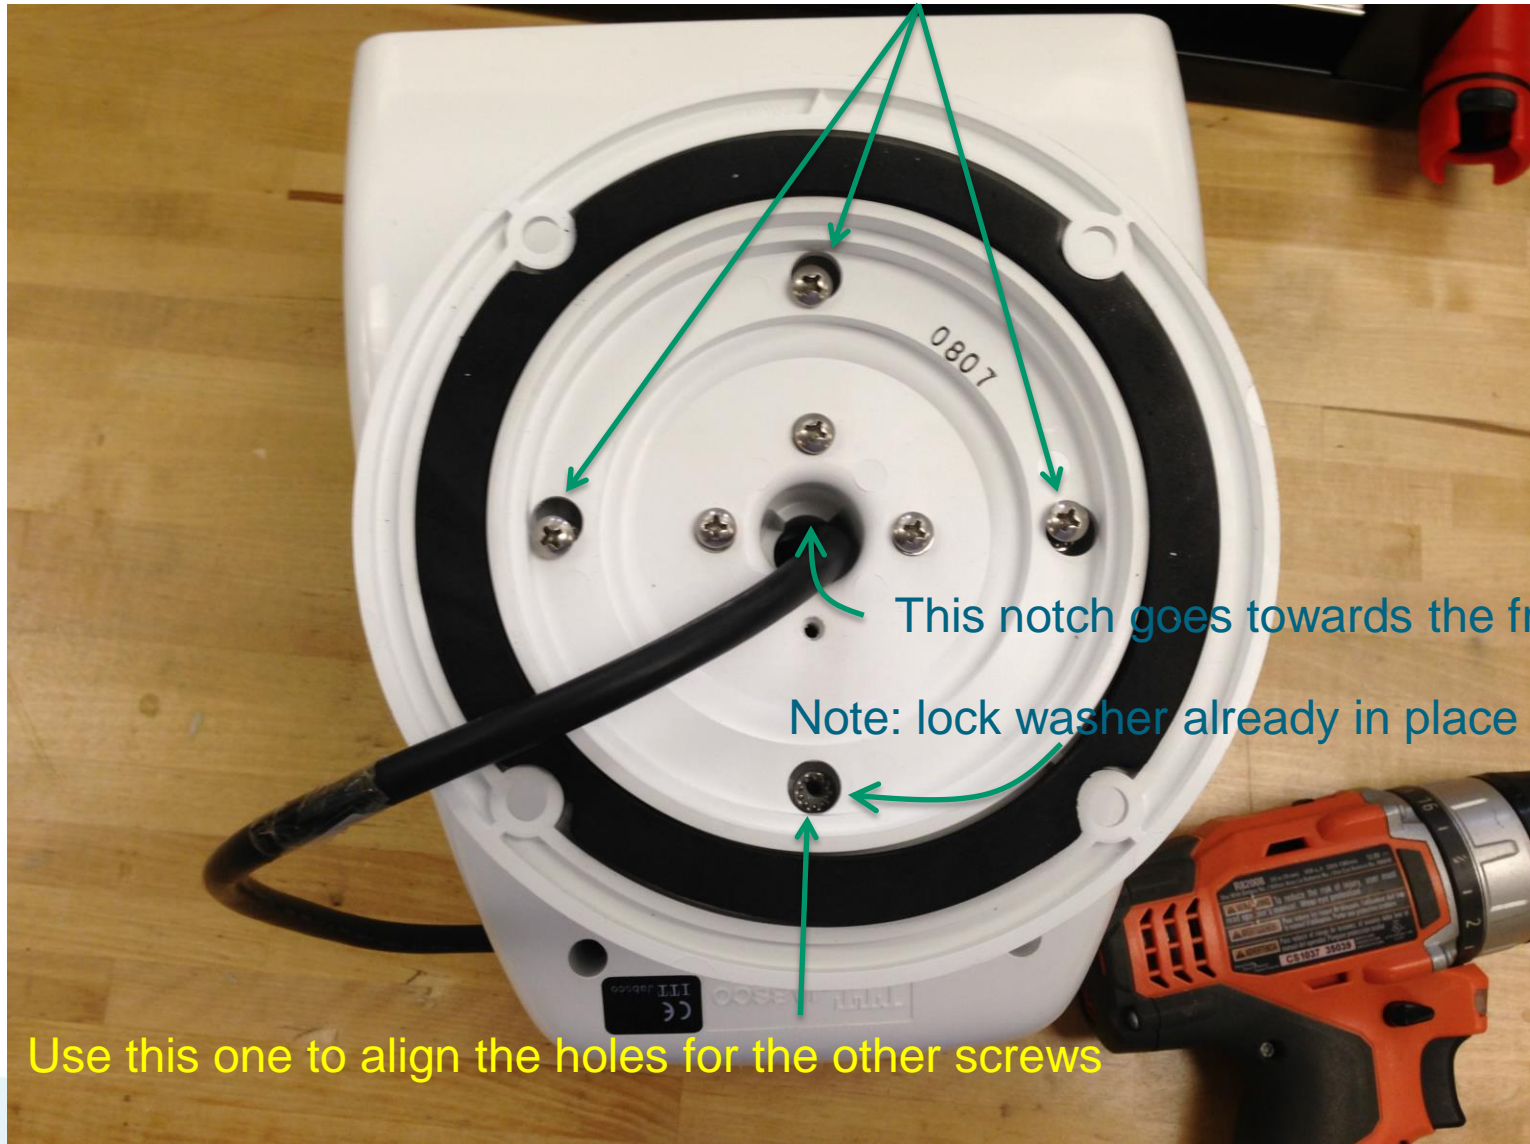

This notch goes towards the front

Note: lock washer already in place

Use this one to align the holes for the other screws